



G7000 DOUBLE BUMP OUT ALL SEASON SILO ENCLOSURE SYSTEM

1-888-SPECMIX

KEEP GOING. KEEP MOVING. KEEP WORKING



All Season Silo Mixing Station With More Space!

The SPEC MIX® All Season Double Bump Out Silo Enclosure is a durable system developed with extra space to protect contractors working in cold, rainy, windy or sunny weather conditions. Custom designed to form fit the SPEC MIX G7000 silo system, this versatile silo enclosure consists of individual component pieces and panels to function as a total enclosure system for cold and rainy conditions or a partial system for wind and sun protection. The Double Bump Out design allows contractors extra room for equipment and other supplies that need protection from severe climates. This portable and reusable weather barrier can be set up by one person in 20-minutes or less - all that is required is a step ladder. Made from durable marine-grade material, sturdy straps and metal clamps, the All Season Double Bump Out Silo Enclosure provides an excellent, economical solution to all-weather construction needs.

FAST SET UP
FORM FITTED
EASY INSTALLATION
EXTENDED MIXING AREA
MULTIPLE ACCESS POINTS
LIGHTWEIGHT, COLLAPSIBLE
INCREASES LABOR PRODUCTIVITY
DOUBLE BUMP OUT FOR EXTRA SPACE
ALL COMPONENTS ARE REPLACEABLE
STURDY ADJUSTABLE COMPONENTS



THE DOUBLE BUMP OUT ALL SEASON SILO ENCLOSURE SYSTEM INCLUDES THE FOLLOWING:

- 1 TOP COVER
- 1 SIDE PANEL
- 2 EXTENSION "BUMP OUT" PANELS
- 1 DOOR PANEL
- 4 STEEL LEGS W/ FOOT PAD FOR "BUMP OUT"
- 4 STEEL TRUSS SUPPORTS
- 2 STEEL DOUBLE-CORNER CROSS BARS
- 2 STEEL CENTER TRUSS SUPPORTS
- 1 TOTE BAG

SPECIFICATIONS

Heavy Duty 10 oz. Marine Grade Polyester
 Weight of cover: 60 pounds
 Weight of 1" steel framework: 80 pounds
 Total weight of silo enclosure: 140 pounds
 Dimension of each silo enclosure extension/framework:
 7.5 feet wide x 6 feet deep (45 sq. ft.)

FOR MORE INFORMATION

CONTACT SPEC MIX, INC. 1-888-773-2649

FOR MORE SPECIFIC INFORMATION,
 VISIT US ONLINE AT WWW.SPECMIX.COM

Limitations / Warnings

Follow the proper set-up instructions for the SPEC MIX G7000 Silo Double Bump Out Enclosure System to avoid bodily injury and harm. End User is responsible for providing adequate ventilation consistent with normal construction enclosure practices. The SPEC MIX G7000 Double Bump Out Silo Enclosure System is NOT flame retardant - Do not put in direct contact or close proximity with flame or heat source.

Warranty

Seller warrants that its Product will conform to the product specifications. The foregoing warranty is in lieu of all other warranties, express or implied, including, but not limited to, those concerning merchantability and fitness for a particular purpose. Because of the difficulty in ascertaining and measuring damages hereunder, it is agreed that, except for claims for bodily injury, Seller's liability to the Buyer shall not exceed the total amount billed and billable to the Buyer for the product hereunder.

OPERATING AND SET-UP INSTRUCTIONS



STEP 1: Begin by installing the Top Cover by wrapping it around the silo's top section and hook each of the 4 straps to the 4 lifting eyes. It is best to attach the top while silo is in the collapsed position. Attach all bungee cords and straps with hooks to grommets and tighten. Make sure the ladder side of Top Cover is lined up with the silo ladder ensuring proper and secure fit. Adjust nylon straps as necessary.



STEP 2: Raise silo according to the SPEC MIX Silo Safety Manual. First attach the 1-sided panel before attaching the Door Panel. Wrap the three bungee straps on the 1-sided panel around the legs and attach to the grommets. Then attach the Door Panel to the side panel at three points using the strap & clamp system. Adjust straps so the side panel and door panel fit tightly. Note that each panel can be open and adjusted for extra ventilation.



STEP 3: The two Bump Out sections of the silo enclosure provide double the room for the silo operator, mixer, water tanks, buckets, shovels and tools. First, assemble the steel framework for both Bump Out sections. Next, connect the two legs to the Double-Corner Cross Bar and pin for each Bump Out section. Connect the two Truss Supports to the Double Corner Cross Bar and pin for each Bump Out section. The end hooks of the Truss Supports must be completely inserted in the silo leg pockets. Last, connect the Center Truss Support to the silo and pin as well as the Double-Corner Cross Bar for each Bump Out section. Make sure framework and pin points are secure.



STEP 4: Unfold the Bump Out panel and pull it over and enclose the framework on each Bump Out Section. Make adjustments to the inside of each Bump Out panel to ensure it fits tight to each corner. Next, attach the Bump Out panel to the side panel at three points using the strap & clamp system. Insert each leg foot pad into the corner pocket of each Bump Out panel. Inside each Bump Out panel is a bungee cord to secure the top of the Bump Out panel to each leg of the framework. Make sure the flap on the cover overhangs each Bump Out section for proper run-off.



STEP 5: The Door Panel of the silo enclosure lifts up and can be hooked to the Top Cover for easy operator and equipment access. A built-in pocket exists at the bottom of the door to hold a 2" x 6" wood board for added support.

© 2008 SPEC MIX INC.

IMPORTANT: End user is responsible for providing adequate ventilation consistent with a normal construction enclosure. The SPEC MIX G7000 Silo Double Bump Out Enclosure System is NOT flame retardant - do not put in direct contact or close proximity with flame or heat source.