

SPEC MIX D2W Workhorse Continuous Mix System

3A5646A

EN

Electric continuous mixer for water-based cementitious materials. For professional use only.

Not approved for use in explosive atmospheres or hazardous locations.


Model 25D900

100 psi (0.69 MPa, 6.9 bar) Maximum Water Inlet Pressure



Important Safety Instructions

Read all warnings and instructions in this manual. Save these instructions.

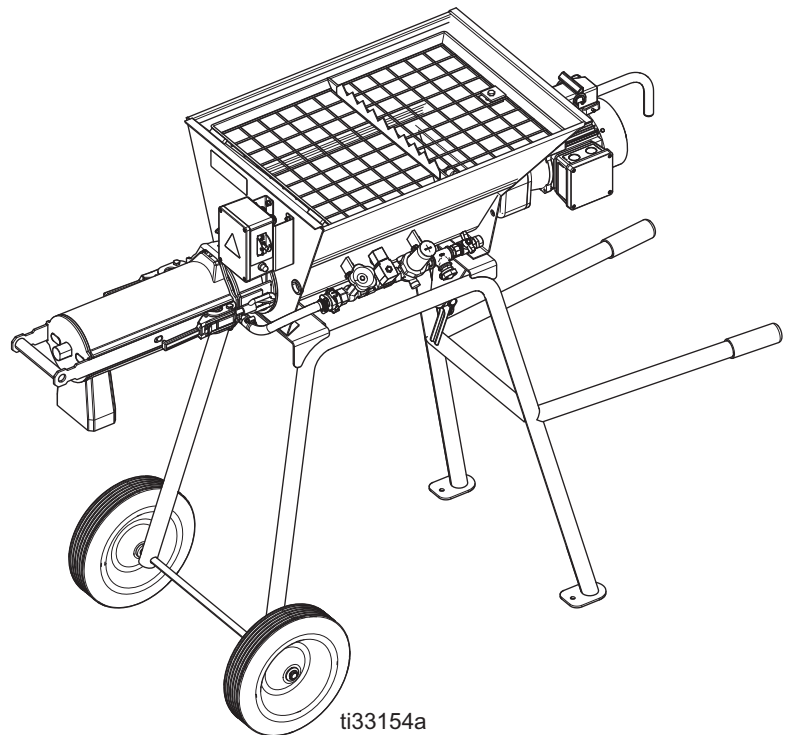

ti33154a

Contents








Warnings	3	Disposal	16
Component Identification	5	Troubleshooting	17
Mix-head Assembly	6	Schematics	19
Water Control Assembly	6	Mixing Shaft Factory Configuration	20
Setup	7	Parts	22
Assemble Unit	7	Mixer Assembly	22
Prepare Unit for Operation	8	Cart (25D938)	24
Water Connections	9	Mixing Shaft Assembly (17T457)	25
Electrical Components	10	Water Control Assembly (17T350)	26
Grounding	10	Control Box Assembly (17T351)	27
Operation	11	Dimensions	28
Shutdown	12	Technical Specifications	29
Changing Material and Storing Equipment	14	Graco Standard Warranty	30
Remove Mixer from Cart Stand	15		
Maintenance	16		
Preventive Maintenance Schedule	16		

Accessories

Part	Description
17T019	ACCESSORY, lid, hopper

Warnings

The following warnings are for the setup, use, grounding, maintenance, and repair of this equipment. The exclamation point symbol alerts you to a general warning and the hazard symbols refer to procedure-specific risks. When these symbols appear in the body of this manual or on warning labels, refer back to these Warnings. Product-specific hazard symbols and warnings not covered in this section may appear throughout the body of this manual where applicable.

 WARNING	
   	MOVING PARTS HAZARD Moving parts can pinch, cut or amputate fingers and other body parts. <ul style="list-style-type: none"> • Keep clear of moving parts. • Do not operate equipment with protective guards or covers removed. • Before checking, moving, or servicing equipment, relieve pressure and disconnect all power sources.
 	ELECTRIC SHOCK HAZARD This equipment must be grounded. Improper grounding, setup, or usage of the system can cause electric shock. <ul style="list-style-type: none"> • Turn off and disconnect power before servicing equipment. • Connect only to grounded electrical outlets. • Ensure ground prongs are intact. • Do not expose to rain. Store indoors. • All electrical wiring must be done by a qualified electrician and comply with all local codes and regulations.



WARNING



EQUIPMENT MISUSE HAZARD

Misuse can cause death or serious injury.

- Do not operate the unit when fatigued or under the influence of drugs or alcohol.
- Do not exceed the maximum working pressure or temperature rating of the lowest rated system component. See **Technical Specifications** in all equipment manuals.
- Use fluids and solvents that are compatible with equipment wetted parts. See **Technical Specifications** in all equipment manuals. Read fluid and solvent manufacturer's warnings. For complete information about your material, request Safety Data Sheets (SDSs) from distributor or retailer.
- Do not leave the work area while equipment is energized or under pressure.
- Turn off all equipment and relieve pressure when equipment is not in use.
- Check equipment daily. Repair or replace worn or damaged parts immediately with genuine manufacturer's replacement parts only.
- Do not alter or modify equipment. Alterations or modifications may void agency approvals and create safety hazards.
- Make sure all equipment is rated and approved for the environment in which you are using it.
- Use equipment only for its intended purpose. Call your distributor for information.
- Route hoses and cables away from traffic areas, sharp edges, moving parts, and hot surfaces.
- Do not kink or over bend hoses or use hoses to pull equipment.
- Keep children and animals away from work area.
- Comply with all applicable safety regulations.



PRESSURIZED EQUIPMENT HAZARD

Fluid from the equipment, leaks, or ruptured components can splash in the eyes or on skin and cause serious injury.

- Relieve pressure when you stop spraying/dispersing and before cleaning, checking, or servicing equipment.
- Tighten all fluid connections before operating the equipment.
- Check hoses, tubes, and couplings daily. Replace worn or damaged parts immediately.



TOXIC FLUID OR FUMES HAZARD

Toxic fluids or fumes can cause serious injury or death if splashed in the eyes or on skin, inhaled, or swallowed.

- Read Safety Data Sheets (SDSs) to know the specific hazards of the fluids you are using.
- Store hazardous fluid in approved containers, and dispose of it according to applicable guidelines.




PERSONAL PROTECTIVE EQUIPMENT

Wear appropriate protective equipment when in the work area to help prevent serious injury, including eye injury, hearing loss, inhalation of toxic fumes, and burns. Protective equipment includes but is not limited to:

- Protective eyewear, and hearing protection.
- Respirators, protective clothing, and gloves as recommended by the fluid and solvent manufacturer.

Component Identification

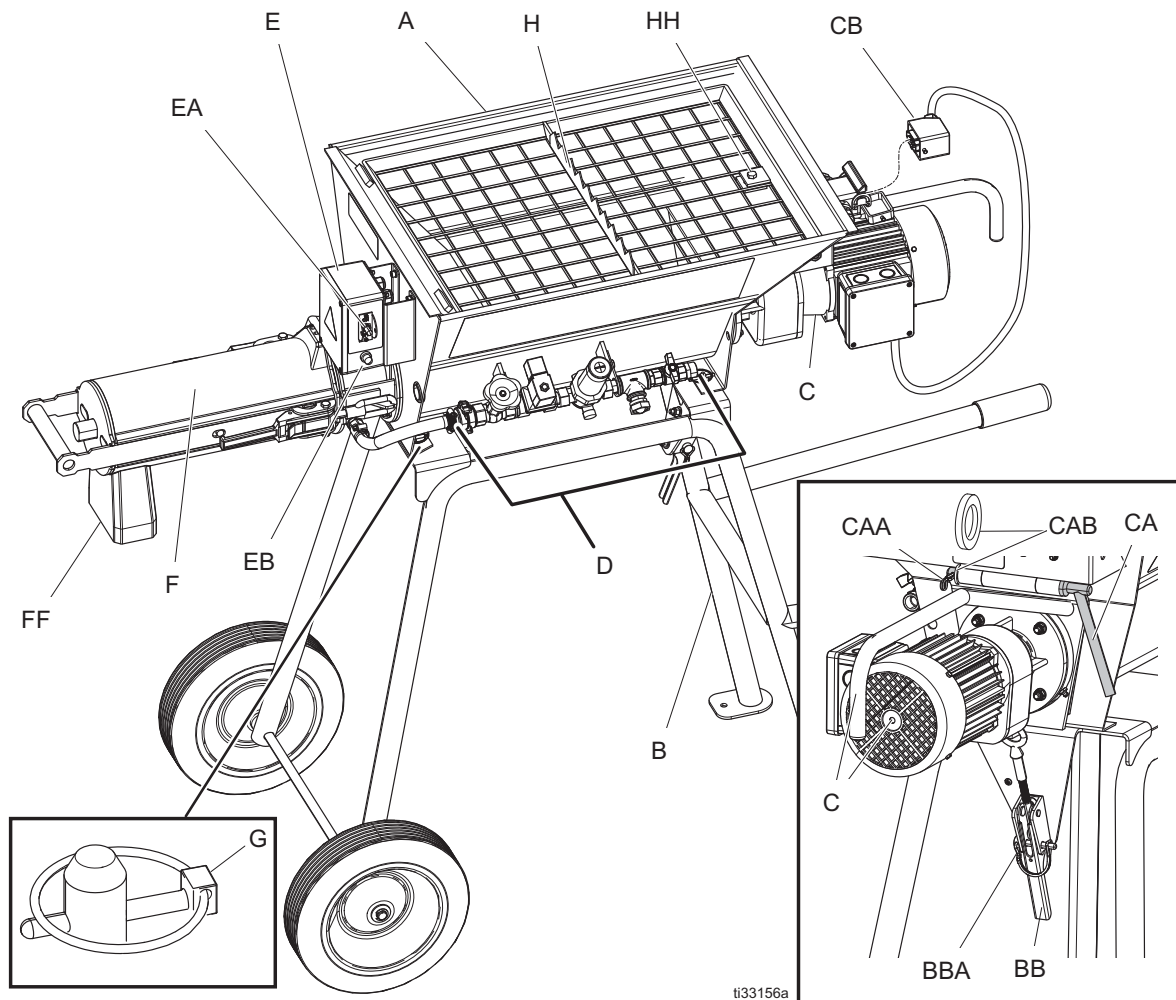


Ref. Description

A	Hopper
B	Cart stand
BB	Rear toggle latch
BBA	Rear toggle latch pin
C	Motor assembly
CA	Motor alignment pin
CAA	Motor alignment pin clip
CAB	Motor alignment pin washer
CB	Motor power cable
CD	Grease fitting

Ref. Description

D	Water control assembly (see detail view for components)
E	Electrical Box
EA	On/Off switch
EB	Circuit breaker reset
F	Mix-head assembly (see detail view for components)
FF	Discharge nozzle
G	Hopper ring pins
H	Hopper grate and bag breaker
HH	Grate retaining screw

Mix-head Assembly

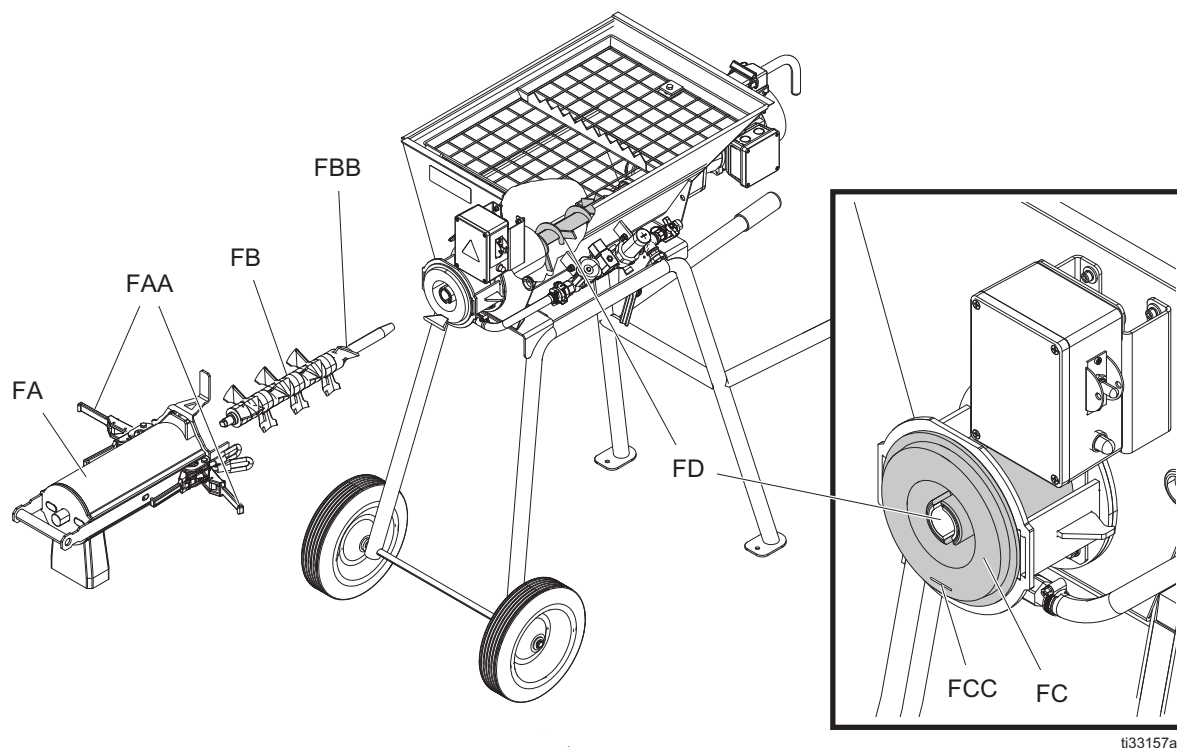


Ref. Description

FA	Mixing tube
FAA	Mixing tube toggle latches
FB	Mixing shaft
FBB	Mixing shaft pins

Ref. Description

FC	Throat insert
FCC	Water dosing port
FD	Material dosing auger shaft

Water Control Assembly

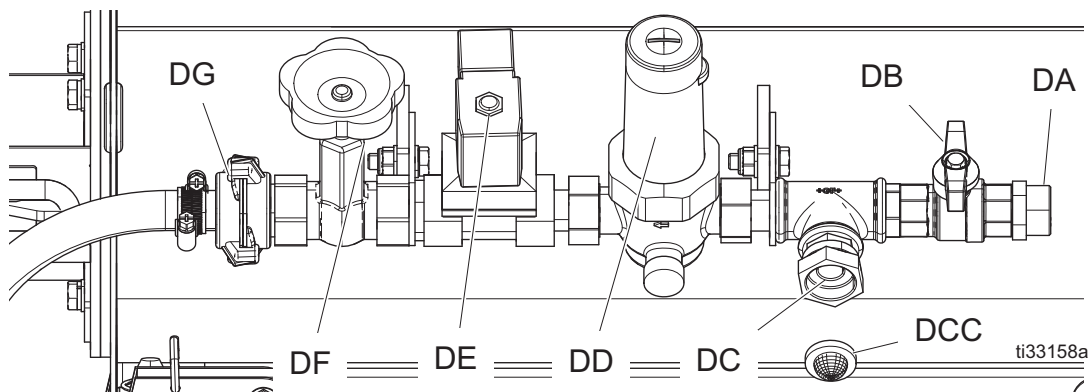

Ref. Description



DA	Water accessory fitting
DB	Water accessory shut-off ball valve
DC	Water supply inlet
DCC	Inlet screen

Ref. Description

DD	Water pressure regulator
DE	Water control solenoid
DF	Water metering valve
DG	Twist-claw outlet fitting/hose

Setup


Assemble Unit

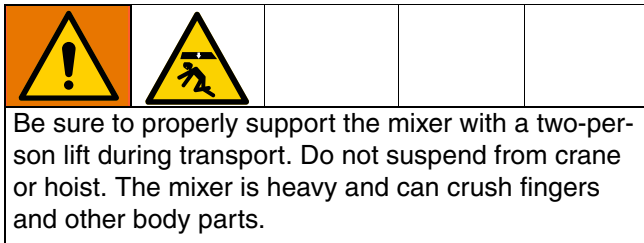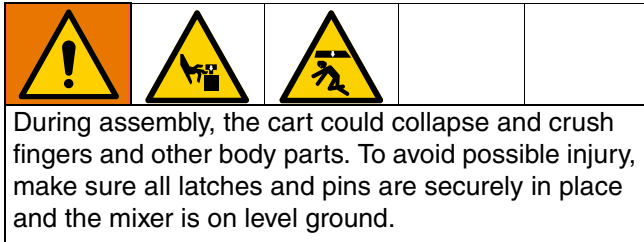


If unit is already assembled, continue to **Prepare Unit for Operation**.

1. Using a two-person lift, place the hopper (A) on top of the cart frame. Secure the hopper to all four corners of cart using the hopper ring pins (G).
2. Fully insert the material dosing auger shaft (FD) into the rear end of the hopper (A).
3. Insert mix shaft (FB) into mix tube (FA). Install shaft and tube onto hopper (A).
 - a. Align mixing shaft pins (FBB) to slots in the material dosing auger shaft (FD) and verify that pins and shaft are fully engaged.
 - b. Firmly connect mixing tube (FA) to hopper (A). Secure mixing tube toggle latches (FAA).


4. Lift the motor assembly (C) so that it connects to the material dosing auger shaft (FD). Immediately secure the motor to the hopper with the motor alignment pin (CA). Ensure the pin has slid completely into place. Slide motor alignment pin washer (CAB) over the end of the alignment pin (CA). Secure alignment pin with motor alignment pin clip (CAA).

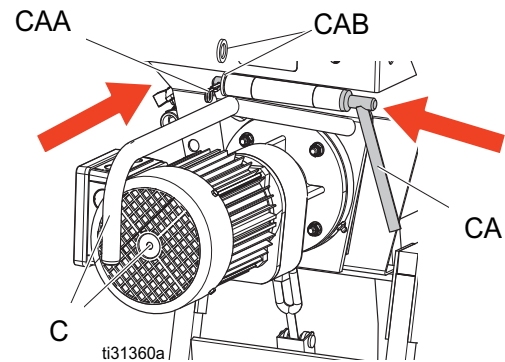


5. Engage the rear toggle latch (BB) on the rear cart leg. Secure with rear toggle latch pin (BBA).

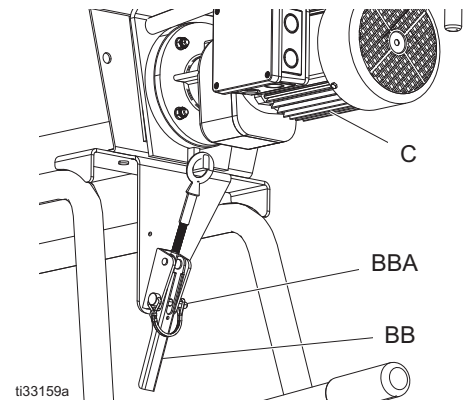


6. Connect motor power cable (CB).

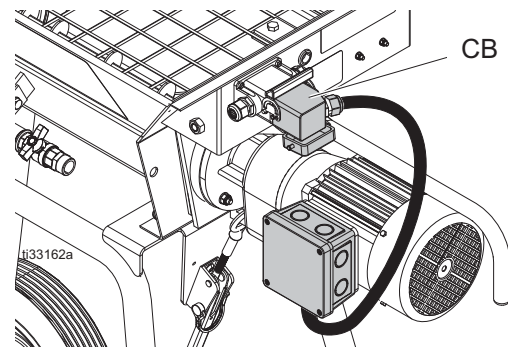


Prepare Unit for Operation

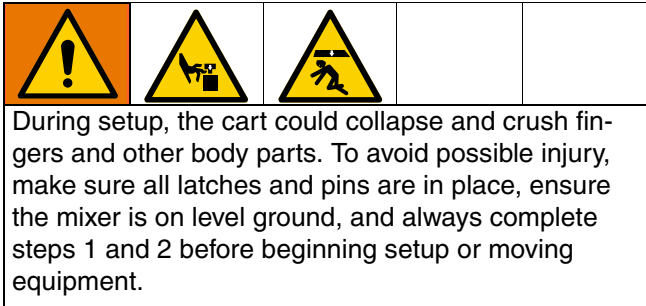


1. Verify that the hopper is secured to all four corners of the frame with hopper ring pins (G).

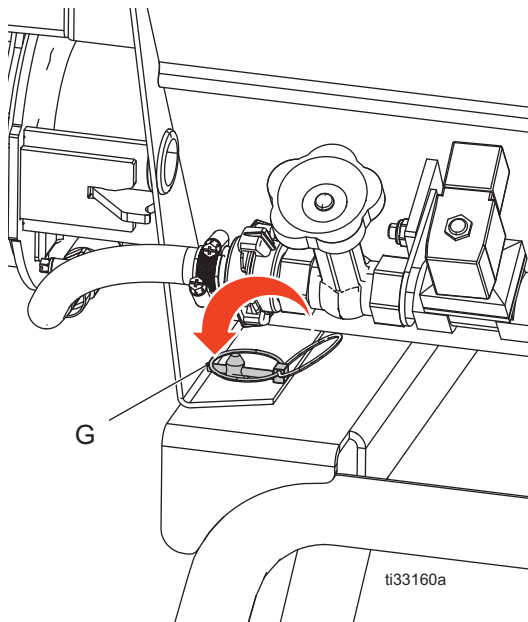


2. Verify that the motor toggle latch (BB), located on the rear cart leg, is engaged with the motor mount and secured with a rear toggle-latch pin (BBA) and frame safety pin (BA).

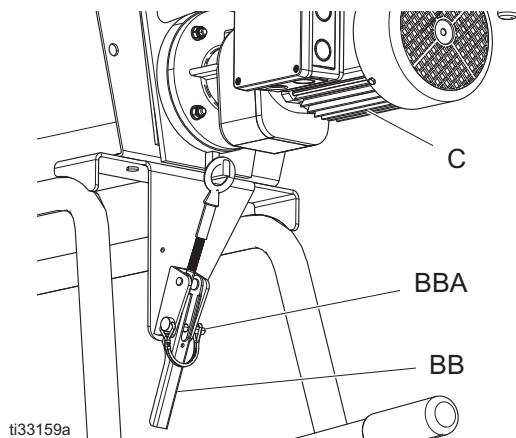


3. Verify that the motor (C) is securely mounted. The motor alignment pin (CA) must be installed and secured with a motor alignment pin washer (CAB) and motor alignment pin clip (CAA).

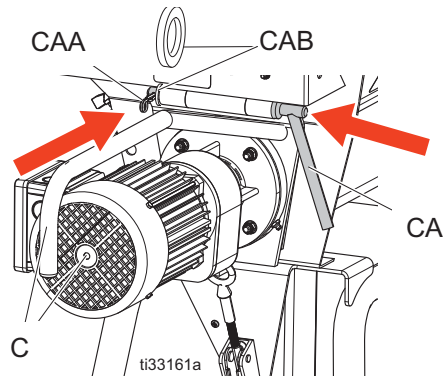


4. Verify that switch (EA) is in the off position, then connect the motor power cable (CB).

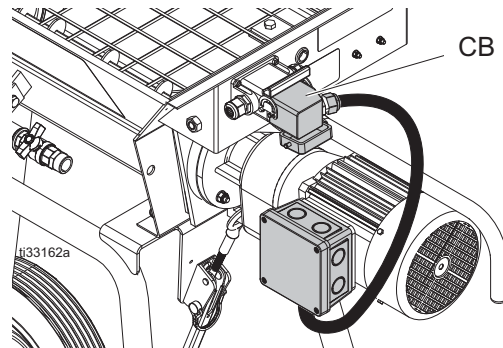

5. Verify that both mix tube toggle latches (FAA) on mixing tube (FA) are latched with their locking tabs engaged.

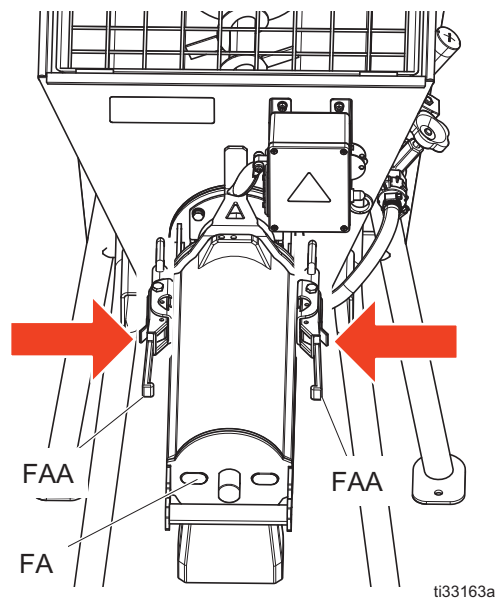


6. Verify that the hopper grate (H) is installed with the bag breaker pointing up. Ensure the hopper grate is secured with the grate retaining screw (HH).

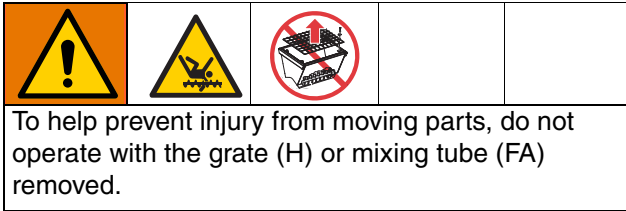


7. Position the discharge nozzle (FF) of the mixer over a pump hopper, wheel barrow, or other receptacle. The mixer should always be used on a horizontal surface so it is secure and stable.

Water Connections

1. Close the water accessory shut-off ball valve (DB).

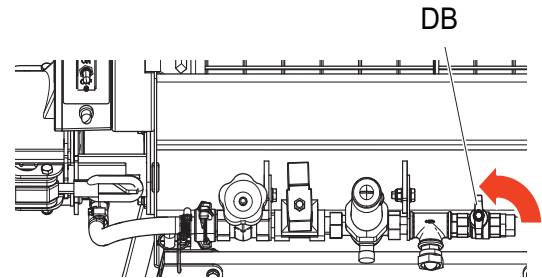


2. Ensure the water supply pressure is between 30-100 psi. The water pressure regulator (DD) has been preset to 30 psi and does not usually require adjustment.

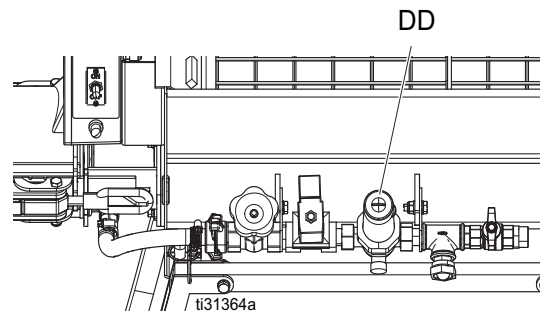

NOTE: The water pressure regulator (DD) reduces the supply pressure to a constant value so that the water metering valve (DF) does not need to be adjusted due to fluctuations in supply pressure. The water pressure regulator (DD) must be set below the minimum pressure expected from the water supply(s) used, and if necessary can be set down to 25 psi (1.6 bar, 0.16 MPa).

3. Connect water supply hose (WH) to water supply inlet (DC).

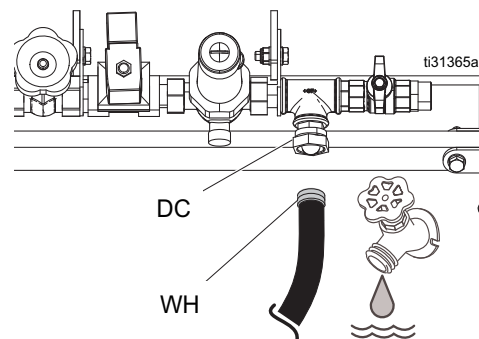

4. Turn on water supply.


Electrical Components

NOTE: Certain 120 V GFCI outlets have been known to trip while using this product. See **Power Supply Requirements** table.


Power Supply Requirements		
Voltage	Circuit Protection	GFCI Requirement
110-120 V	15 A Circuit Breaker	GFCI Not Recommended

Minimal Power Cord Wire Gauge	
Length (ft)	Wire Gauge (AWG)
25	16
50	12
100	10

1. Only use a grounded power cord. Plug the cord into the wall outlet.
2. Verify that the On/Off switch (EA) is in the OFF position. Plug the power cord (PC) to the electrical box (E).

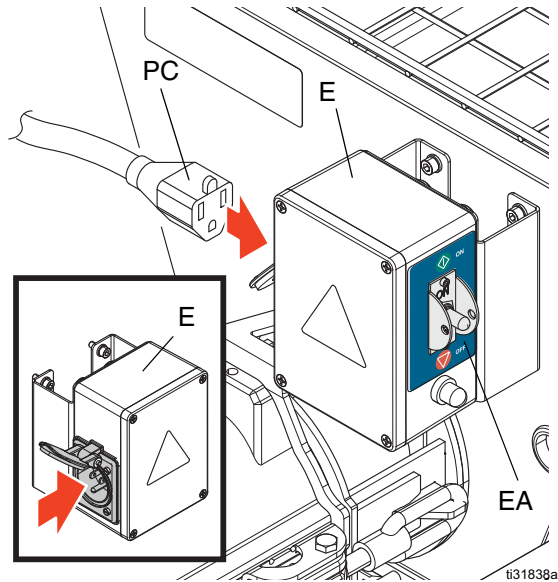


Grounding

 


The equipment must be grounded to reduce the risk of static sparking and electric shock. Electric or static sparking can cause fumes to ignite or explode. Improper grounding can cause electric shock. Grounding provides an escape wire for the electric current.

The system is grounded through the power cord (PC).

Operation

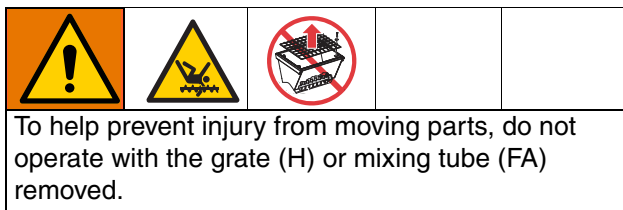


1. Complete **Setup**, page 7.
2. Fill the hopper (A) with dry material.

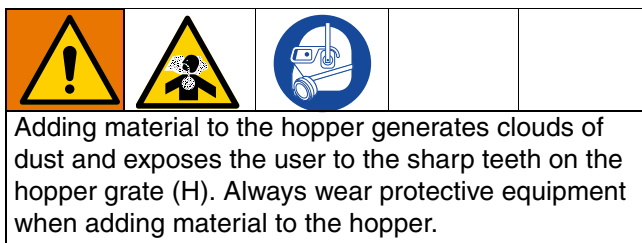

Set the bag in the center of the hopper grate (H) so the bag breaker teeth engage the center of the bag. Twist the bag approximately 15 degrees in both directions to rip the bag open. Lift both ends of the bag so the dry materials falls out of the bag and into the hopper.


NOTE: Keep hopper level as close to the grate as possible to achieve maximum output and consistent water content.

3. Turn the unit on by moving switch (EA) into the ON position.

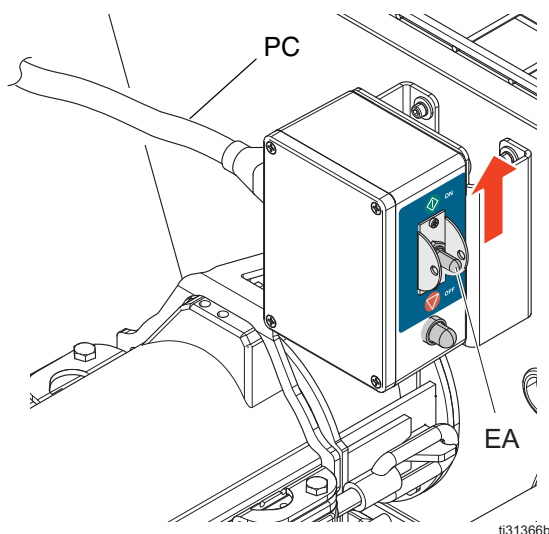

NOTE: The water control solenoid (DE) will automatically open when the unit is turned on.

4. Adjust the water metering valve (DF) until the material is the correct consistency.

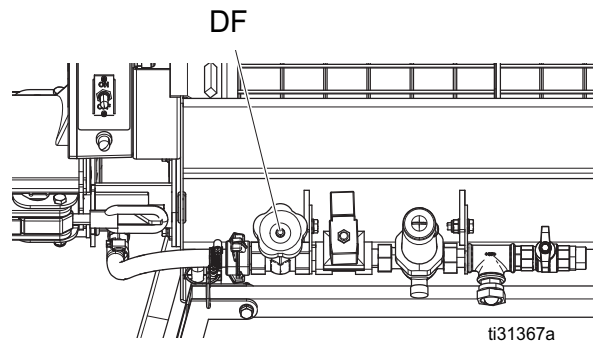

NOTE: It takes time for the mixed material to travel through the tube. Avoid making over-adjustments. Make small adjustments and wait 10-15 seconds to allow the material to travel through the tube before making another adjustment.

5. If desired, pause the output during operation by starting and stopping the unit using the On/Off switch (EA).

NOTICE


To prevent damage to mix-head assembly, do not allow material to cure in mix-head assembly. Follow **Shutdown**, page 12.

Shutdown



Avoid contact with the discharge nozzle (FF), mix shaft (FB), and material dosing auger shaft (FD) during shut down. These parts can pull in, crush, cut, or amputate fingers and other body parts.

1. Let the hopper run out of dry material.
2. Turn off the water supply while mixer is running to relieve pressure.
3. Turn the unit off by flipping the switch to the OFF position.

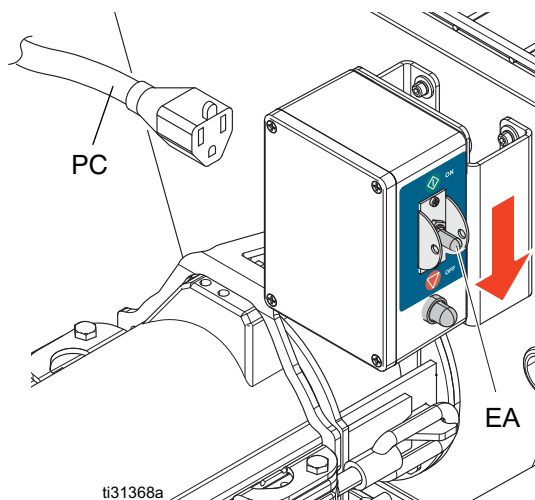

4. Unplug the power cord (PC) from the mixer.
5. Depressurize/drain water control assembly (D) by opening water accessory ball valve.

NOTICE

To prevent damage to the water control assembly (D), drain water from unit if it is to be stored for extended periods of time or in freezing temperatures. Follow **Changing Material and Storing Equipment**, page 14.

6. Disconnect water supply.
7. Disconnect the motor power cable (CB).

NOTICE


To prevent damage to mix-head assembly, do not allow material to cure in mix-head assembly.

8. Disengage both mix tube toggle latches (FAA) and remove mix-head assembly (F).



Do not use pressurized water jets to clean electrical box, motor, capacitors, or wires. Use of pressurized water jets can cause water to enter the electrical controls and increase potential for electric shock.


9. Pull the mixing shaft (FB) out of the mixing tube (FA) and flush both with water and a brush. Make sure all of the mixing elements on the mixing shaft are clean.
10. Clean the face of the throat insert (FC).

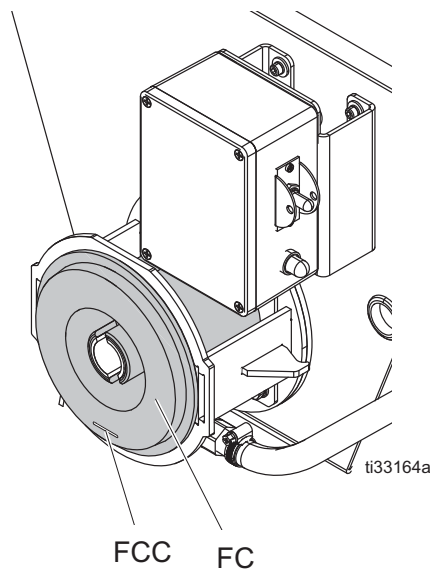



11. Clean out water dosing port (FCC).

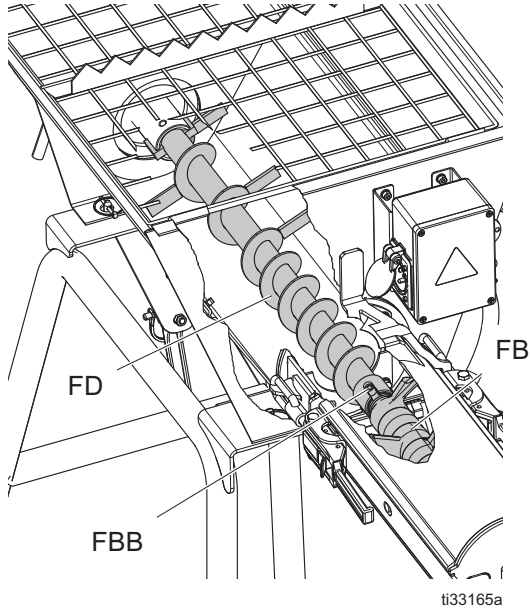

12. Reinstall the mixing tube assembly onto the throat insert. Ensure the pins (FBB) on the mixing shaft (FB) line up with the slots in the material dosing shaft (FD).

NOTE: Hopper lid accessory (17T019) can be used to keep excess material in hopper dry.



Changing Material and Storing Equipment

				
<p>Avoid contact with the discharge nozzle (FF), mix shaft (FB), and material dosing auger shaft (FD) during preparation for changing material or storing equipment. These parts can pull in, crush, cut, or amputate fingers and other body parts.</p>				

				
<p>Do not use pressurized water jets to clean electrical box, motor, capacitors, or wires. Use of pressurized water jets can cause water to enter the electrical controls and increase potential for electric shock.</p>				


1. Follow **Shutdown**, page 12, steps 1-11. Do not reconnect fittings or reinstall mixing tube.
2. Vacuum and/or hose down the hopper and dosing shaft. Make sure all the dosing/breaker elements are clean.

NOTICE				
<p>If water is used to clean hopper (A) or material dosing auger shaft (FD), allow equipment to fully dry before placing more dry material in the hopper. A wet hopper or auger shaft can cause dry material to cure onto mixer parts.</p>				

3. **For storage and use in freezing temperatures:**
 Drain the water. Remove twist-claw irrigation fitting (DG) and open water accessory ball-valve (DB). Carefully tilt the unit to allow water to drain from both ends of the water control assembly (D), which is separated by the closed water control solenoid (DE). Ensure water has also been drained from the water output hose and water dosing port (FCC) in the throat insert (FC).

NOTICE
<p>If working in a cold environment, failure to drain water from the water control assembly (D) could cause damage to the system due to freezing water.</p>

4. Reconnect all fittings and reinstall the mixing tube assembly onto the throat insert. Ensure the pins (FBB) on the mixing shaft (FB) line up with the slots in the material dosing shaft (FD).

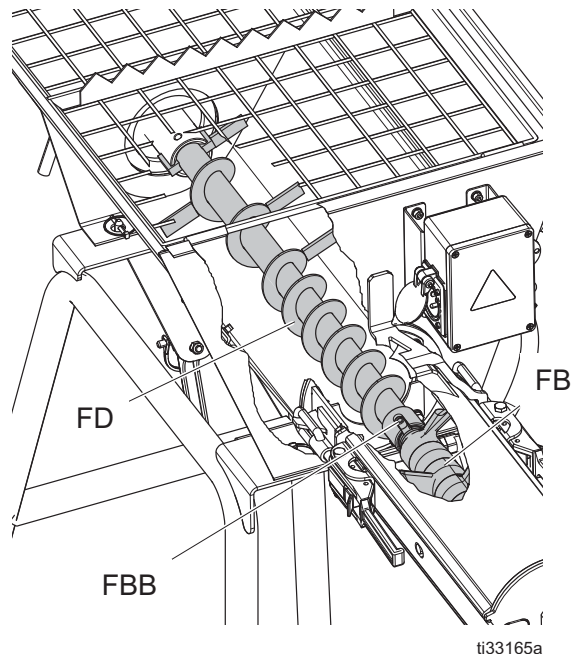

Remove Mixer from Cart Stand

1. Follow the **Shutdown** procedure on page 12, then perform the **Changing Material and Storing Equipment** procedure on page 14.
2. Remove the motor:
 - a. Disconnect the motor power cable (CB).
 - b. Remove the rear toggle-latch clip (BBA), then open the rear toggle latch (BB).
 - c. Support the motor, then remove the motor alignment pin clip (CAA), motor alignment pin washer (CAB), and the motor alignment pin (CA). Set the motor aside.

3. Disengage both mixing tube toggle latches (FAA) and remove the mix-head assembly (F).
4. Remove hopper ring pins (G).
5. Remove mixer. Lift the mixer off of the stand.




Be sure to properly support the mixer with a two-person lift during removal. Do not suspend from crane or hoist. The mixer is heavy and can crush fingers and other body parts.

6. For assembly, see **Assemble Unit**, page 7.

Maintenance

Preventive Maintenance Schedule

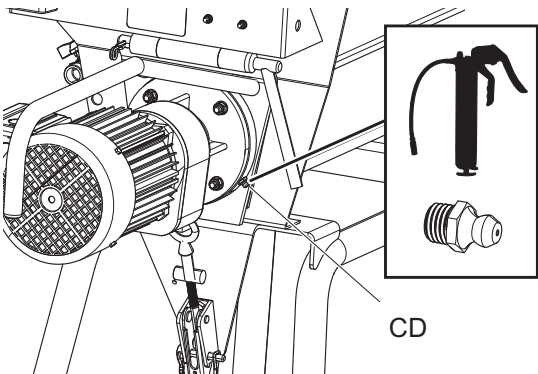Routine Inspection		Frequency
Ensure all protective clips, ring pins, latches, grating, fasteners, housings, and enclosures are installed and in good working order, functioning properly, and free of excessive wear, cracks, or corrosion.		Before every use
Ensure all electrical components, cabling, and motor are properly assembled so that they are sealed from water ingress, free of debris, and in good working order.		
Ensure all warning labels are clean and easily readable.		
Grease		Frequency
<div>Motor grease fitting (CD)</div> <div></div>	<div>Shell Gadus S2 V220 2 (formerly Shell Retinax EP2) or an equivalent NLGI Grade 2 grease compatible with rubber.</div> <div>Ensure any grease used is compatible. Do not mix grease types.</div>	Monthly
<div>Gear-box</div>	<div>CLP ISO VG220 gear oil or equivalent.</div> <div>Ensure any oil used is compatible. Do not mix oil types.</div>	10,000 hours or 3 years (whichever comes first)

Disposal

At the product's end-of-life, recycle the equipment in a responsible manner, per local regulations.

- Mixers contain lubricating grease in the motor coupler joint and in the gear-box. This grease may need to be flushed/drained and recycled separately from other components.

Troubleshooting




1. Follow **Shutdown**, page 12, before checking or repairing mixer.

Problem	Cause	Solution
Poor mix quality	Mixing shaft configuration can significantly affect mix quality.	Reconfigure mixing shaft. Refer to Mixing Shaft Factory Configuration , page 20, for recommended configuration.
	Buildup of cured material.	Clean any debris or cured material on or inside the motor coupler, dosing auger, mix shaft, throat insert, or mix tube assembly.
Excessive wear on mix tube end cap, or mixing element at the discharge end.	The Mixing Shaft Bushing needs to be replaced.	Replace mixing shaft bushing.
	Aggregate is too large.	Refer to Technical Specifications , page 29, for maximum aggregate size.
Motor will not run	120 V model only: The mixer has been installed on a GFCI circuit.	Check to see if a GFCI circuit is in use and has tripped. NOTE: Certain 120 V GFCI outlets have been known to trip while using this product. You may need to use a non-GFCI power supply. Refer to the Power Supply Requirements table, page 10, for GFCI requirements by model.
	The circuit breaker has tripped.	Reset circuit breaker switch (EB).
	Main power has turned off.	Check all cord connections are secure and voltage is correct.
	Motor power cable (CA) is disconnected.	Reconnect motor power cable (CA).
Motor stalling or, failing to get to full speed	Excessive tension/friction on the mix shaft and dosing auger.	Loosen both mix tube toggle latches (FAA). The latches are too tight if the metal frame on the mix tube bows outwards.
		Loosen the motor toggle latch if it is too tight.
		Clean any debris or cured material on or inside the motor coupler, dosing auger, mix shaft, throat insert, or mix tube assembly.
	Material in mix tube has fully or partially cured.	Follow the Shutdown procedure (page 12) and retry.

Problem	Cause	Solution
Material water consistency	Inlet water pressure is fluctuating below the regulator-set pressure.	The water pressure regulator (DD) reduces the pressure at the water metering valve (DF) to a constant value. Adjust the water pressure regulator (DD) so the pressure is less than the lowest pressure possible from water supply.
	Water pressure and flow is constant, but there is less dry material entering mix tube.	There is not enough dry material in the hopper. Add more dry material to the hopper, and keep adding dry material to maintain the level as close to the hopper grate as possible.
		The material dosing auger shaft (FD) is dirty or worn and needs to be cleaned or replaced.
	There is a debris in the water control assembly (D).	Verify the water inlet screen (DCC) is in place and that it is clean.
		Disassemble the water assembly and clean any debris.
		Clean debris from water dosing port (FCC).
Water does not turn on, low flow, or water does not turn off.	Solenoid damaged or clogged with debris.	Clean or replace water control solenoid (DE).
	Incorrect solenoid installed.	The solenoid must be “normally closed” type. Use only genuine Graco replacement parts.
	There is debris in the water control assembly (D).	Verify the water inlet screen (DCC) is in place and that it is clean.
	Disassemble the water control assembly (D) and clean any debris.	Clean debris from water dosing port (FCC).


Schematics

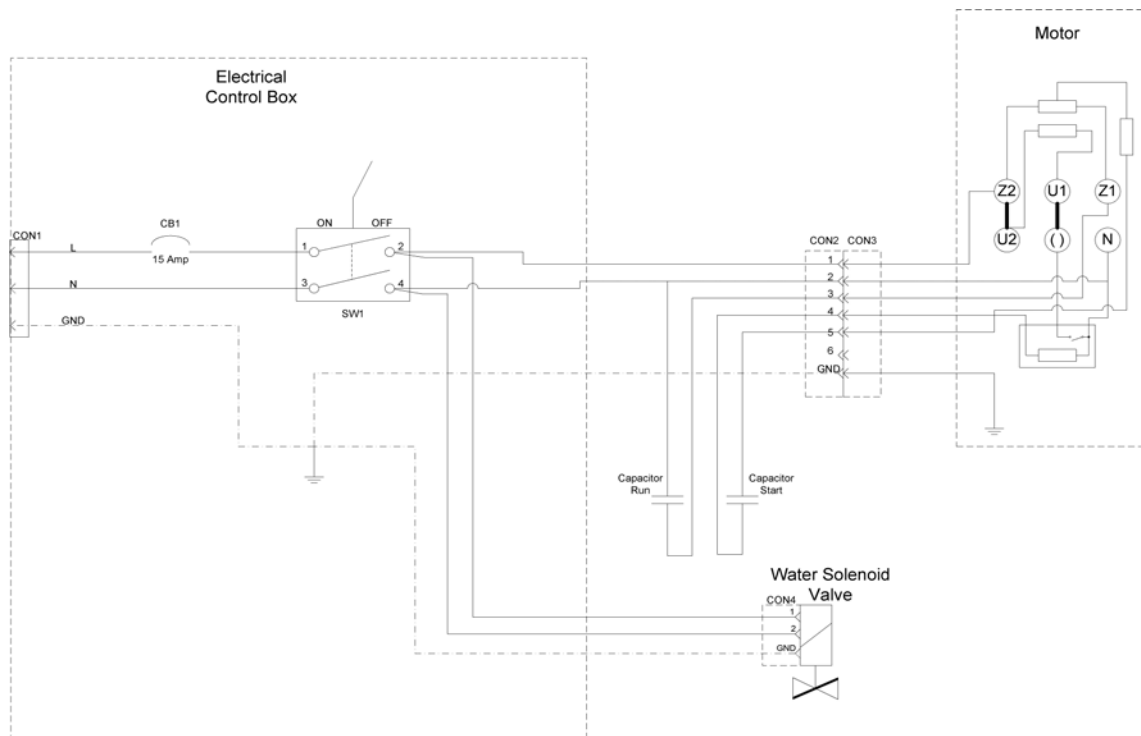

Mixing Shaft Factory Configuration

The factory configuration of the mix shaft assembly works well for most common, pump-grade stucco materials. The configuration of the shaft can be changed if an alternate configuration is desired.

For most materials, it is recommended to reduce starting torque by positioning the pointed ends of the mixing elements so that they are on the leading edge. However, for very thin materials, positioning some or all of the mixing elements so that the blunt ends are on the leading edge may improve the mix quality.

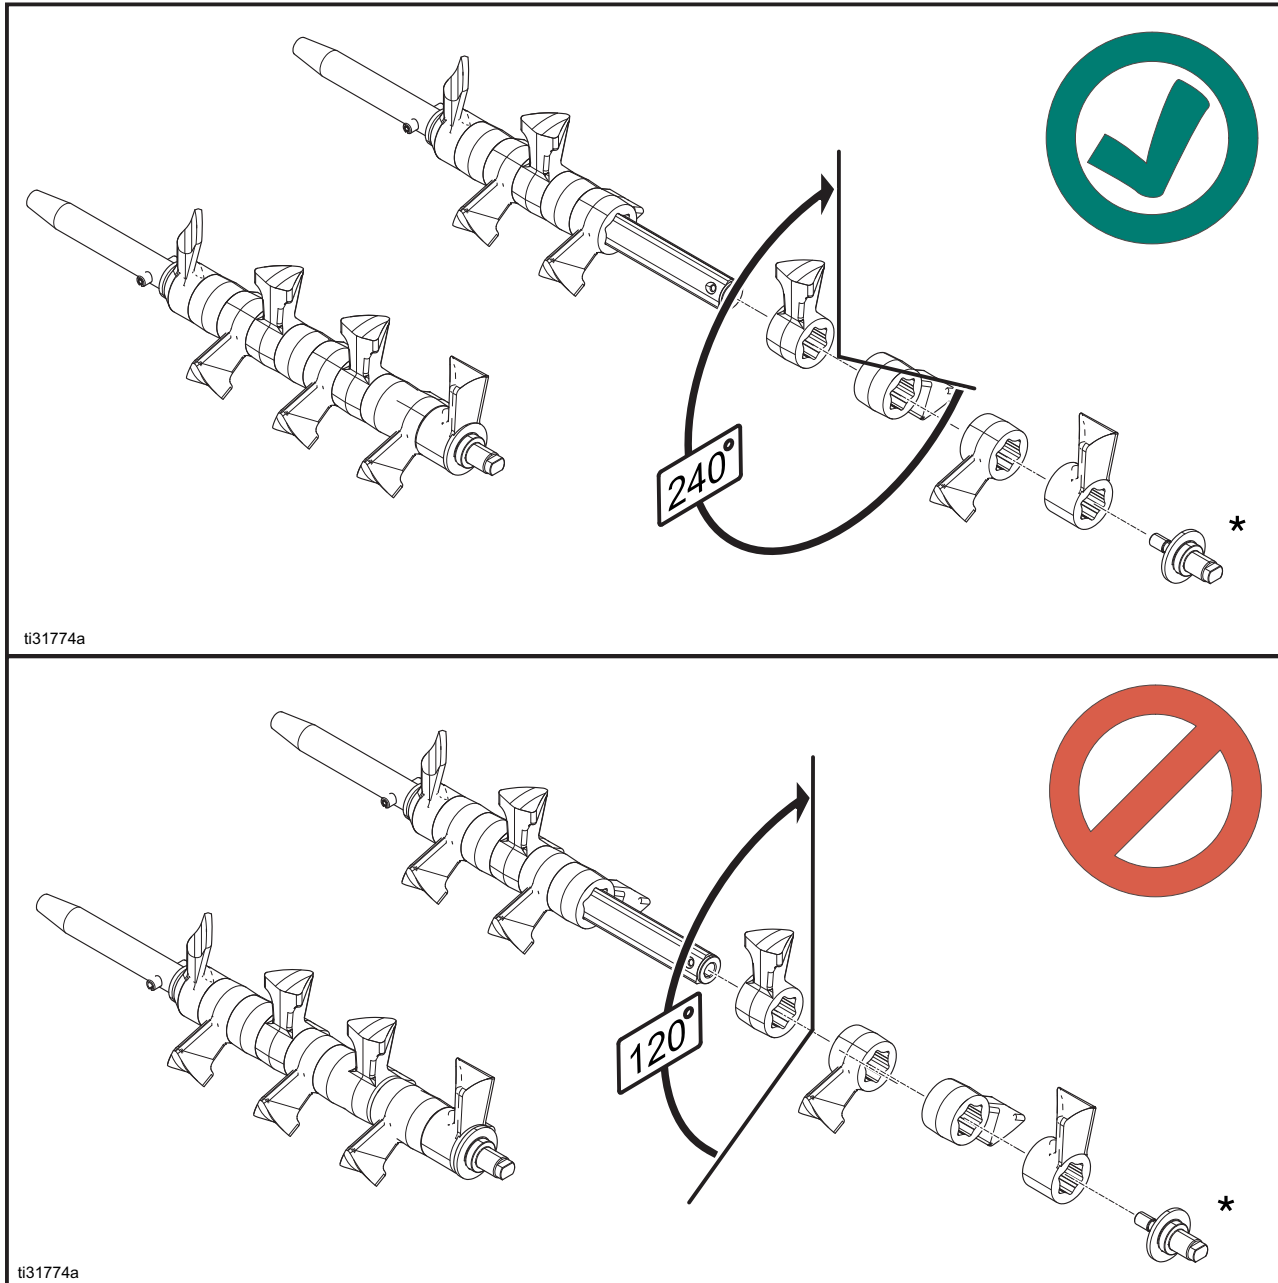


* The mix shaft retainer has a left-handed thread to ensure it does not disassemble during operation. To loosen retainer, rotate clockwise.

[illegible]

Parts


Mixer Assembly

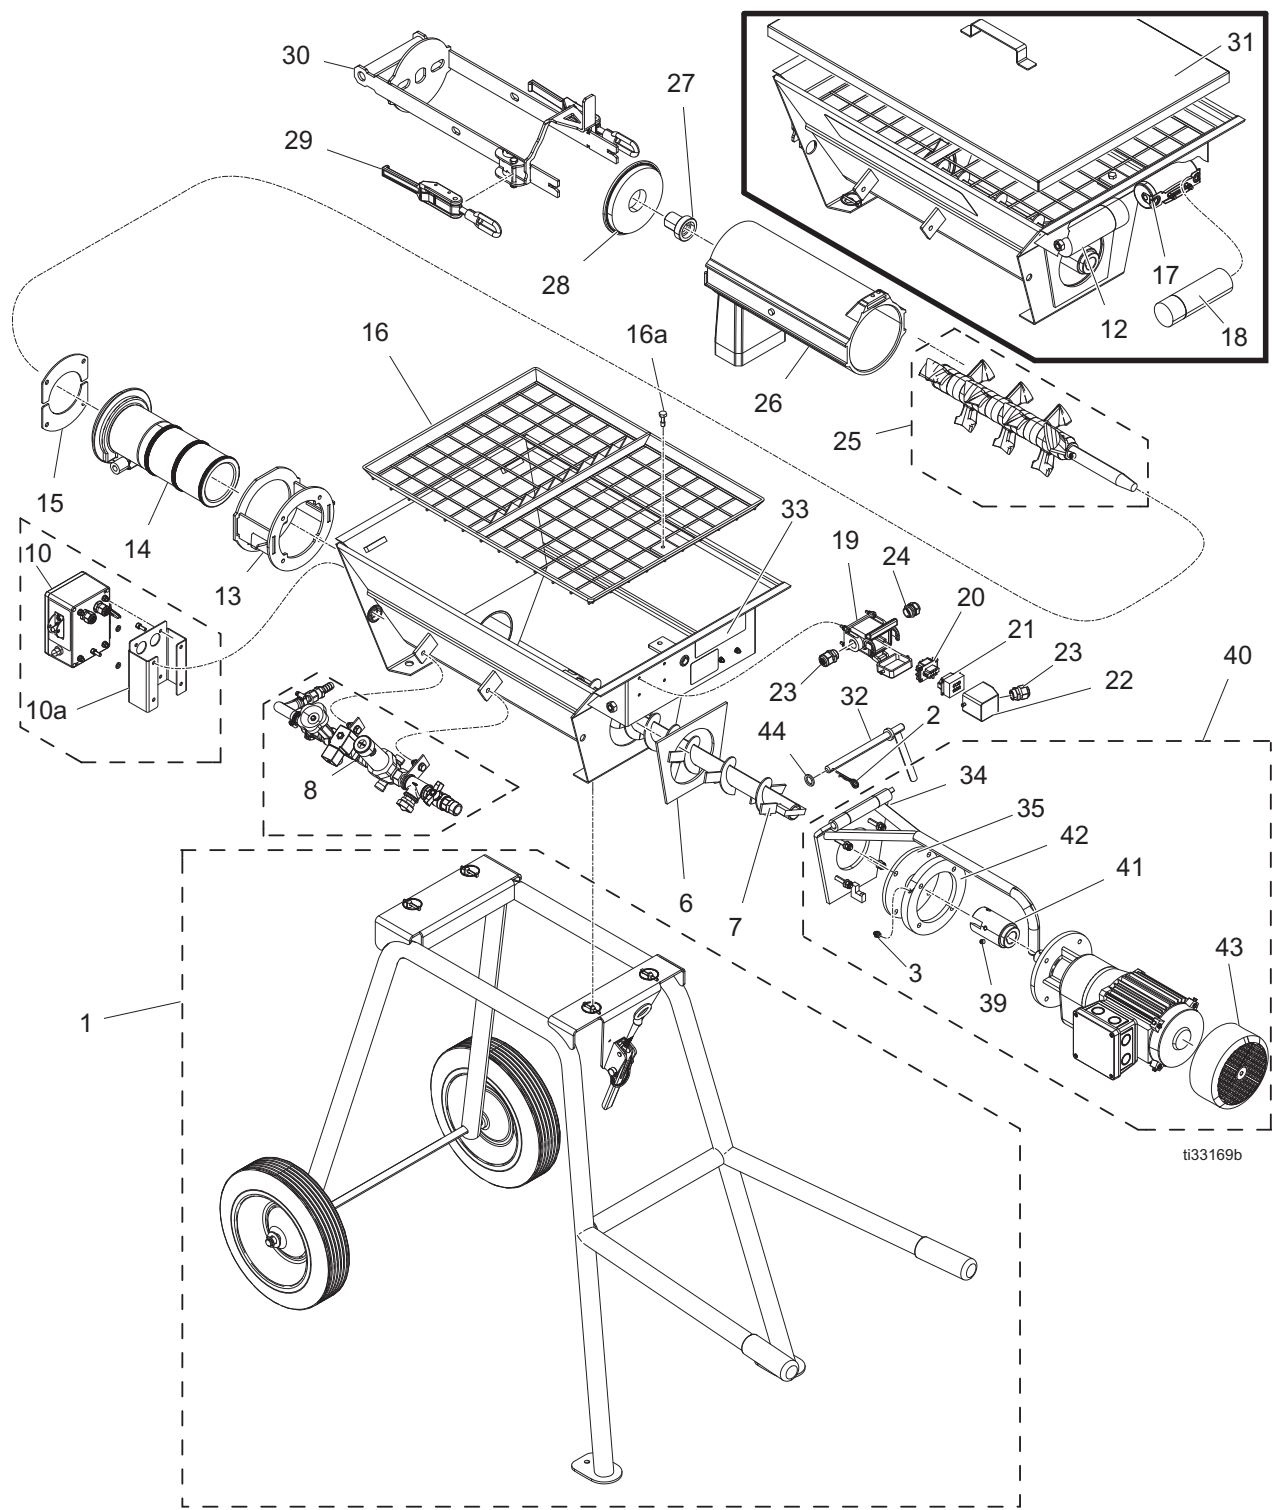

Ref.	Part	Description	Qty.
1	25D938	KIT, cart, D2W, Workhorse	1
2	17T334	KIT, clip, hitch, low profile	1
3	17T513	FITTING, grease, m8x1	1
6	17T442	KIT, gasket, hopper, motor	1
7	17T470	KIT, auger, dosing, 55 mm, black	1
8	17T350	KIT, module, water control, 120V	1
10	17T351	KIT, control box, 120V	1
10a	17T366	KIT, bracket, control box	1
12	17T349	KIT, capacitor, 80 µf, stud (run), (120 V system)	1
13	17T342	KIT, collar, mounting, mix head	1
14	17T443	KIT, insert, throat, dosing zone	1
15	17T330	KIT, plate, clamp, collar (pack of two)	2
16	17T441	KIT, grate, hopper	1
16a	17T327	KIT, fastener, captured	1
17	17T352	KIT, capacitor, 216 µf (start), (120 V system)	1
19	17T446	KIT, housing, socket, 6-pin	1
20	17T448	KIT, connector, socket, 6-pin	1
21	17T449	KIT, connector, plug, 6-pin	1
22	17T335	KIT, housing, plug, 6-pin	1
23	17T447	KIT, grip, cord	1
24	17T346	KIT, grip, cord, 2-wire	1
25	17T457	KIT, shaft, mix assembly	1
26	17T459	KIT, sleeve, mix tube	1
27	17T456	KIT, bushing, bearing, mix shaft	1
28	17T455	KIT, cap, mix tube	1
29	17T468	KIT, latch, toggle	2
30	17T458	KIT, frame, mix head	1
31	17T019	ACCESSORY, lid, hopper (not included)	1
32	17T333	KIT, pin, motor, alignment	1
33▲	17M606	LABEL, warning, entanglement	1
34	17T332	KIT, bracket, motor mount	1
35	17T445	KIT, seal, motor coupler	1
39	-----	SCREW, set, m8 x 1.25 x 10 mm	1
40	17T367	KIT, motor, 120 V/60 Hz, mounted	1
41	17T345	KIT, coupler, motor	1
42	17T339	KIT, flange, ring, motor mount	1
43	17T368	KIT, cover, motor fan, 150 mm	1
44	-----	WASHER, flat, 15 mm	1

▲ Replacement Danger and Warning labels, tags, and cards are available at no cost.

Cart (25D938)

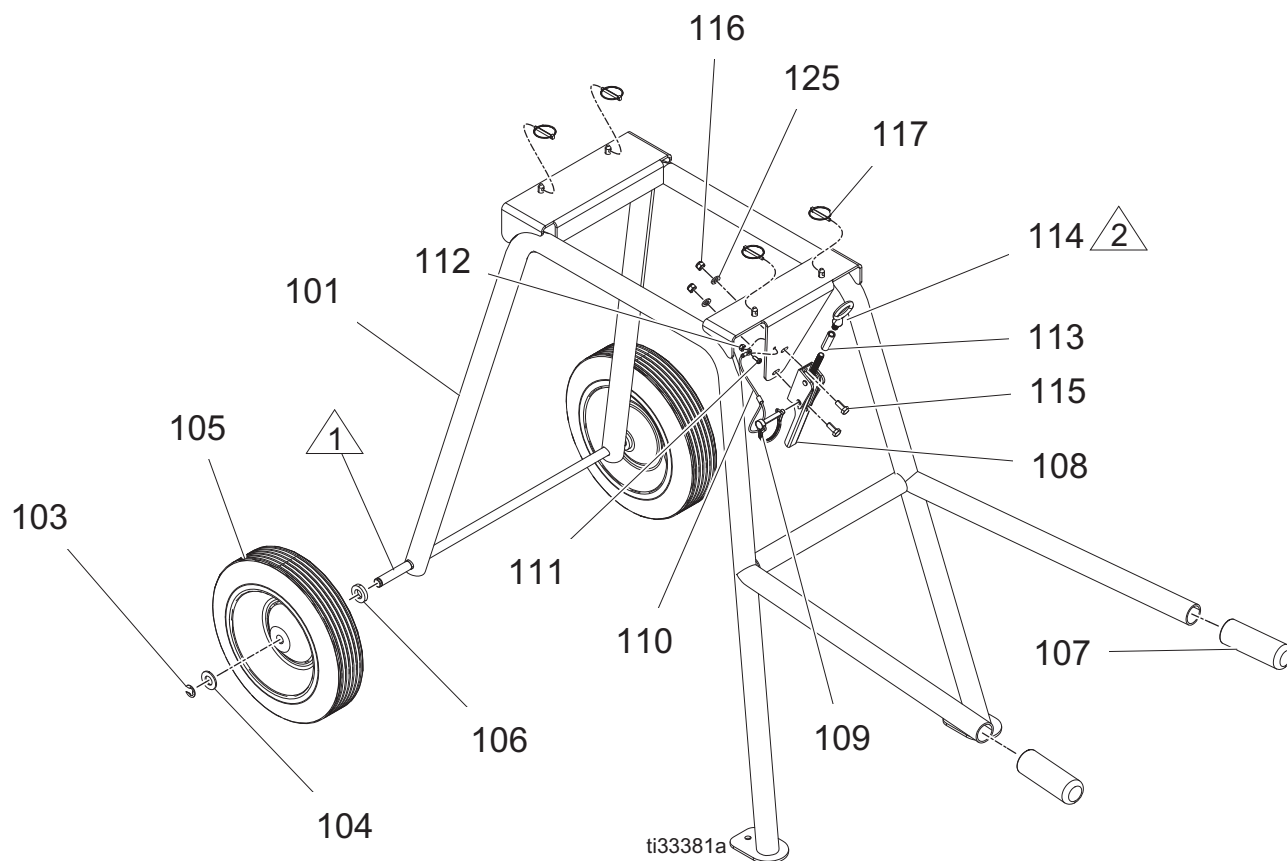


△1 Lubricate axle with lithium grease.

△2 Assemble with permanent (red) threadlocker.

Ref.	Part	Description	Qty.	Ref.	Part	Description	Qty.
101	----	CART, Spec Mix	1	113	17V535	ADAPTER, latch, eye bolt	1
103*	101242	RING, retaining, ext.	2	114	17V606	BOLT, eye, 3/8	1
104*	----	WASHER, plain, 5/8	2	115	125112	SCREW, cap, 5/16-18	2
105*	----	WHEEL, semi-pneumatic, offset	2	116	----	NUT, nylock, 5/16	2
106*	----	WASHER, space	2	117	MTA010	PIN, lynch, 3/16 diameter shaft	4
107	17W644	KIT, grip, cart, handle (pack of two)	2	125	----	WASHER, plain, 5/16	2
108	17J710	KIT, latch, adjustable	1	*Wheel Replacement Kit 17J706 (purchase separately) includes 103 (1), 104 (1), 105 (1), and 106 (1).			
109	17W645	KIT, pin, 5/16, locking	1				
110	17V605	CABLE, lanyard	1				
111	----	SCREW, pan, #10-24	1				
112	----	NUT, nylock, #10-24	1				


Mixing Shaft Assembly (17T457)

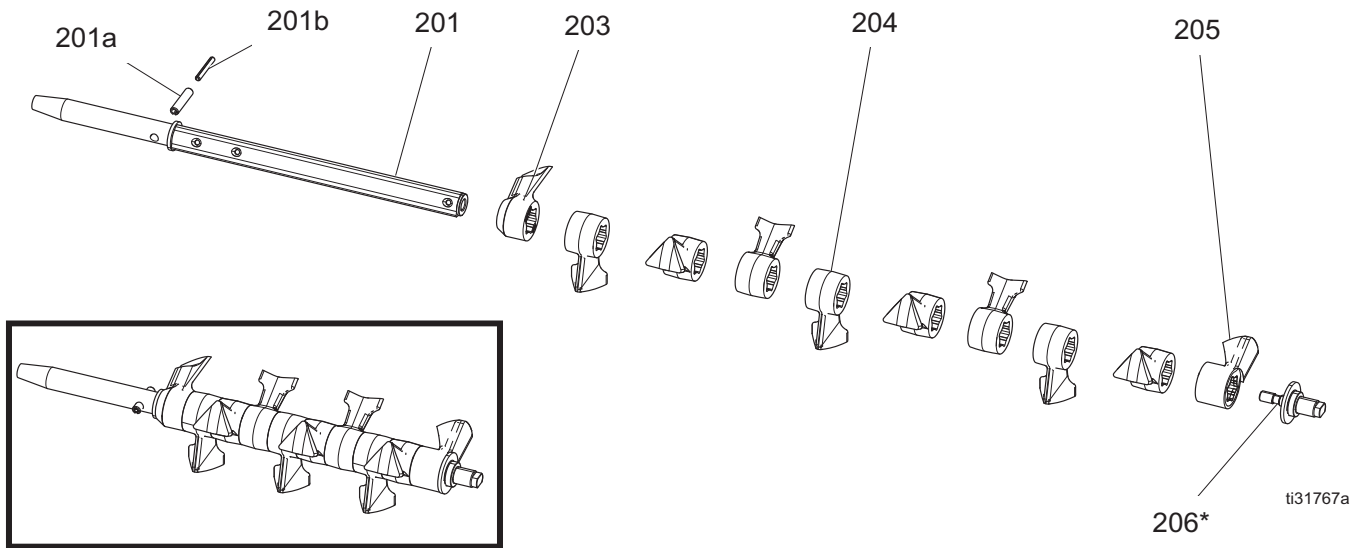

Ref.	Part	Description	Qty.
201	17T460	KIT, shaft, mix, bare	1
201a	17T464	KIT, pin, roll, 10 mm x 45 mm long	1
201b	17T465	KIT, pin, roll, 6 mm x 45 mm long	1
203	17T461	KIT, element, mix wing, inlet	1
204	17T466	KIT, element, mixing wing	8
205	17T463	KIT, element, mix wing, outlet	1
206*	17T462	KIT, retainer, mix shaft, M12 left-handed	1


* The mix shaft retainer has a left-handed thread to ensure it does not disassemble during operation. To loosen retainer, rotate clockwise.

Water Control Assembly (17T350)

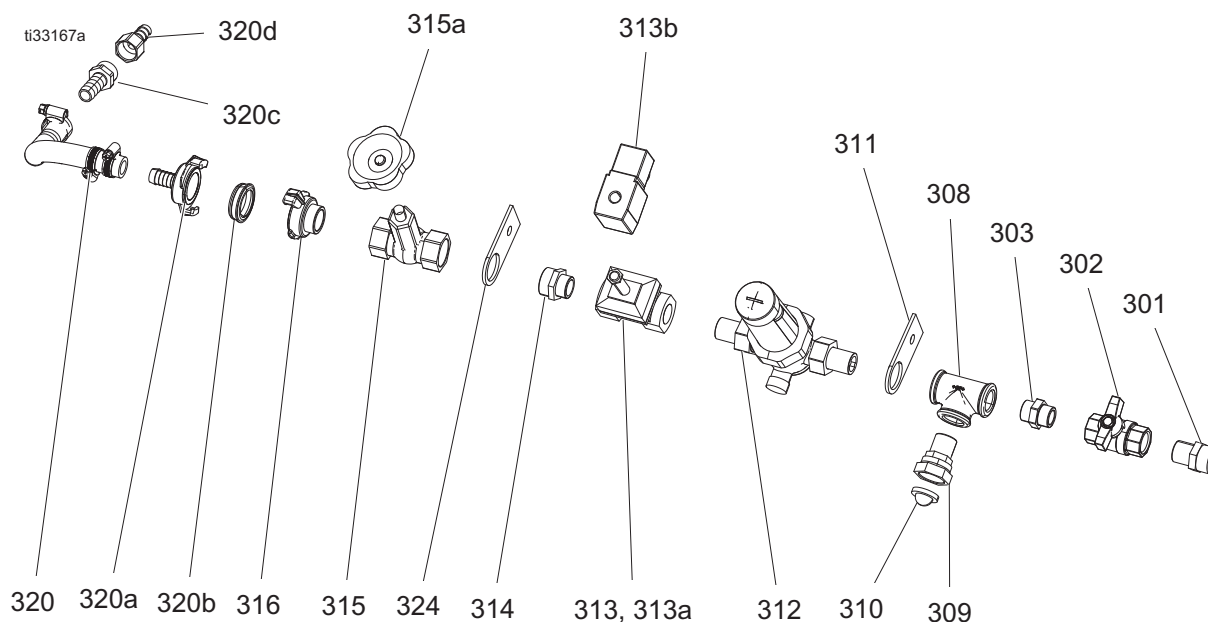

Ref.	Part	Description	Qty.
301	17T355	KIT, fitting, gh, male	1
302	17T451	KIT, valve, ball	1
303	125408	FITTING, nipple	1
308	101846	FITTING, tee, 1/2 pipe	1
309	17T354	KIT, fitting, gh, female, swivel	1
310	17T426	KIT, screen, filter, gh	1
311	17T337	KIT, bracket, wc assembly, right	1
312	17T450	KIT, regulator, pressure	1
313	17T353	KIT, solenoid, valve, 120 V	1
313b	17T357	KIT, coil, solenoid valve, 120 v	1
314	17T338	KIT, fitting, reducer, 3/4 to 1/2 pipe	1
315	17T452	KIT, valve, needle	1
315a	17T469	KIT, handle, needle valve	1
316	17T453	KIT, fitting, Geka x 3/4 in. bsp	1
320	17T340	KIT, hose, outlet assembly	1
320a	17T454	KIT, fitting, Geka x 1/2" barb	1
320b	17T438	KIT, gasket, Geka	1
320c	17T329	KIT, fitting, barb, male	1
320d	17T328	KIT, fitting, barb, female	1
324	17T336	KIT, bracket, wc assembly, left	1


Control Box Assembly (17T351)

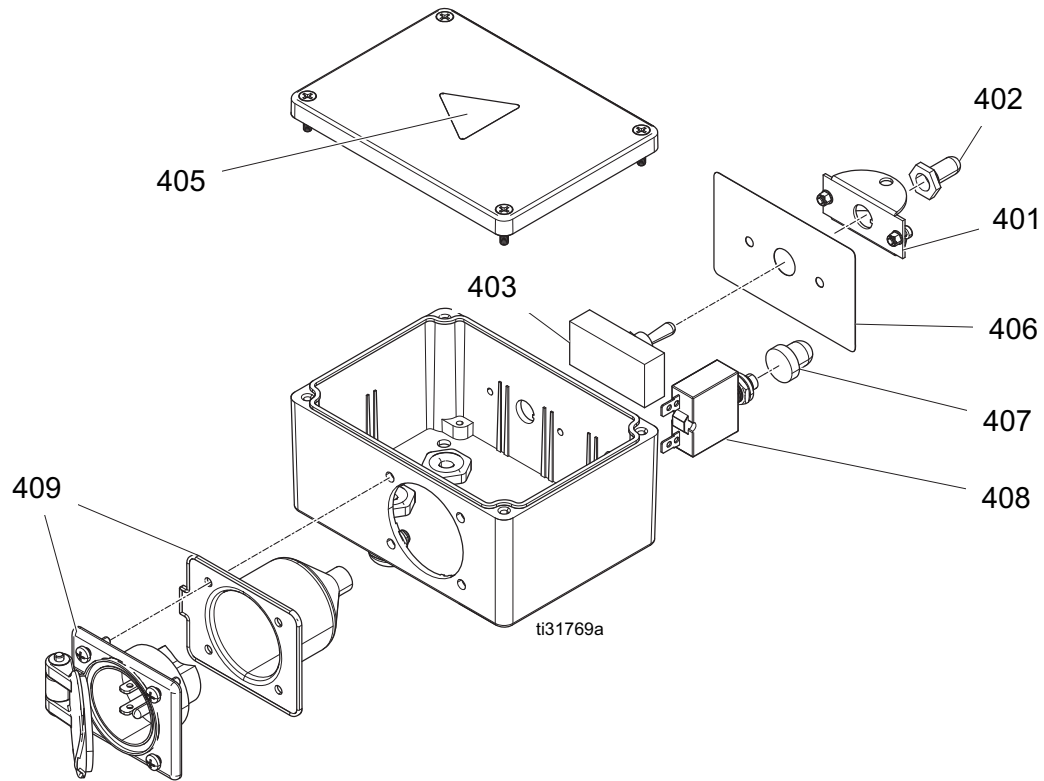

Ref.	Part	Description	Qty.
401	17T364	KIT, guard, toggle switch	1
402	17T362	KIT, boot, toggle switch	1
403	17T425	KIT, switch, toggle	1
405▲	16T764	LABEL, warning, shock	1
406	17T365	KIT, label, on-off	1
407	17T423	KIT, boot, breaker switch	1
408	17T363	KIT, circuit, breaker, 15 A/1 pole	1
409	17T360	KIT, socket, power inlet, 15 A	1

▲ Replacement Danger and Warning labels, tags, and cards are available at no cost.

Dimensions

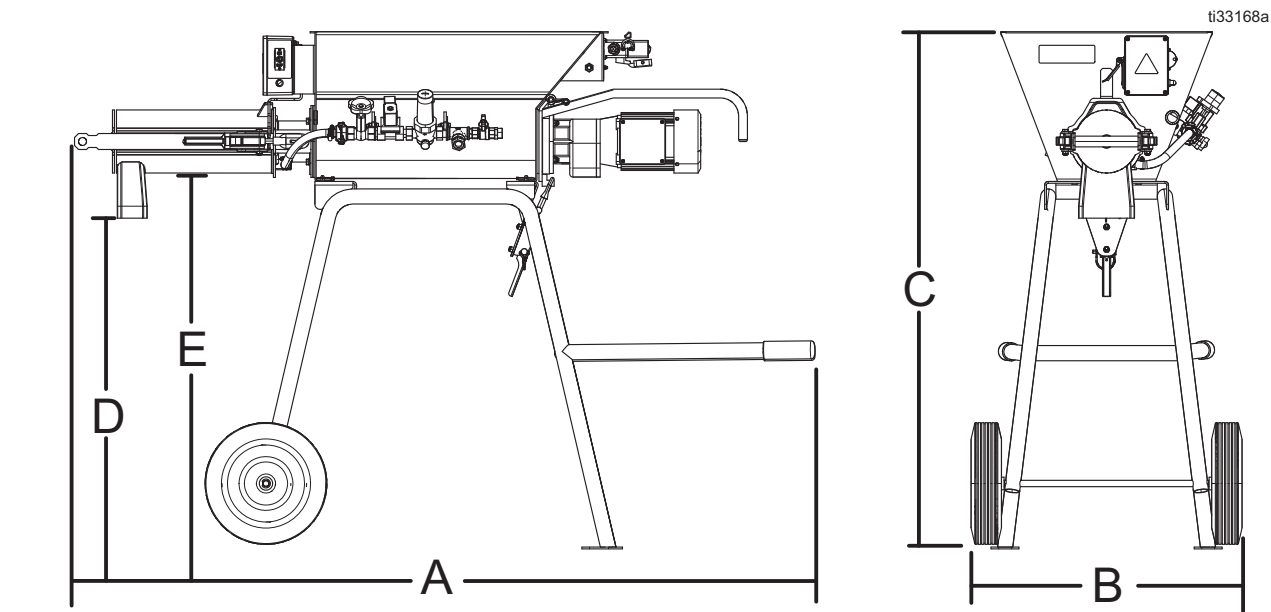

Dimensions		
	U.S.	Metric
A	73.0 in.	185 cm
B	26.7 in.	68 cm
C	51.0 in.	130 cm
D	32.0 in.	81 cm
E	36.4 in.	92 cm

Technical Specifications

SPEC MIX D2W Workhorse Continuous Mix System		
	US	Metric
Maximum water feed inlet pressure	100 psi	0.69 MPa, 6.9 bar
Maximum Motor Speed	260 rpm	
Output	*40 bags per hour	
Hopper Capacity	1.6 cubic ft (2.5-3 80 lb bags typical)	45 liters
Weight (empty)	216 lb	98 kg
Power Requirements	120 V / 60 Hz / 15 Amps / 1.5 hp	
Materials		
Water-based cementitious materials with aggregate less than 0.160 in. (4 mm) in diameter.		
Water Inlet Feed Pressure Requirements		
Minimum Pressure	30 psi	0.21 MPa, 2.1 bar
Maximum Pressure	100 psi	0.69 MPa, 6.9 bar
Material Construction		
Wetted Components	Brass, rubber, plastic, plated steel, aluminum	
Noise (dBa)		
Maximum sound pressure level less than 75 db(A) A-rating emission.		
Inlet/Outlet Sizes		
Fluid inlet size	3/4 in. garden hose thread, female swivel	
Fluid outlet size	3/4 in. garden hose thread, male swivel	
Operating Ambient Temperature		
Temperature	32° to 120° F	0° to 49° C

* 80 lb bags, base coat stucco (approximately 6 gpm).

